GB **ADP 905**

PROGRAMME CHART

Whirlpool is a registered trademark of Whirlpool U.S.A.

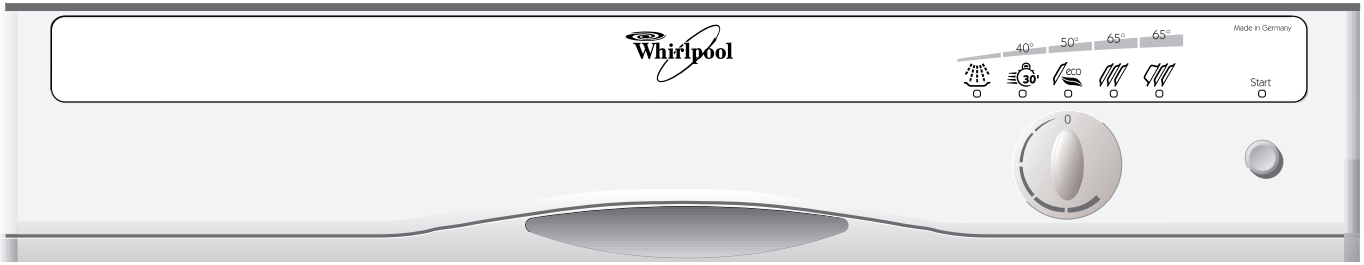

Start **Start button indicator lamp**
Switches on when the dishwasher is operating.
Flashes when a fault occurs.
Switches off at the end of the programme.

Programme Symbol and temperature	Load Crockery and cutlery	Detergent		Consumption * Normal load					
		Pre-wash (small compartment)	Pre-wash (large compartment)	Water (Liter)	Energy (kWh)	Time (Min.)			
Prewash	Crockery to be washed later.	-	-	**8.0**	**0.02**	**12**	-	-	-
Rapid 40° C	Lightly soiled crockery with no dried-on food.	-	+	**13.0**	**0.85**	**30**	-	-	-
Eco 50° C 2)	Normally soiled crockery with dried-on food.	+	+	**20.0**	**1.45**	**90**	-	-	-
Universal 65° C	Normally soiled crockery.	-	+	**15.0**	**1.50**	**85**	-	-	-
Normal 65° C 1)	Normally or heavily soiled crockery.	+	+	**21.0**	**1.60**	**87**	-	-	-

*) Values for normal conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.

1) Programme recommended when using detergents of type A (non enzyme-based detergents).
2) Programme recommended when using detergents of type B (enzyme-based detergents).
Reference programme for Test Institute and energy label.

5019 100 91135

(We reserve the right to make technical modifications)

Quick Reference Guide

GB

Daily check list

1. Arrange crockery so that items do not touch each other.
2. Load cups at an inclination to facilitate water circulation.
3. In general, place the cutlery in the basket with the handles positioned downwards, but ensure that sharp knives and forks that might cause injury are placed in the basket with the handles positioned upwards.
4. Make sure the water jet can reach all loaded items and that the spray arms turn freely.
5. Turn on the water supply tap before starting the dishwasher.

Important:

- **Switch off the dishwasher: once the "Start" indicator lamp has switched off. If you switch off the dishwasher during a wash cycle, when switched on again the dishwasher resumes the cycle from where it was interrupted.**
- **If a fault occurs or you wish to change the current programme, press the "START" button for about 5 seconds until the Start indicator lamp switches off ! Refer to the "Troubleshooting Guide" in these user instructions to remedy any problems.**
- **If regeneration salt is to be added, IMMEDIATELY start a washing programme, to eliminate any residual salt.**

Upper rack

Crockery holders:

- Down: cups and long-stemmed glasses.
- Up: plates.

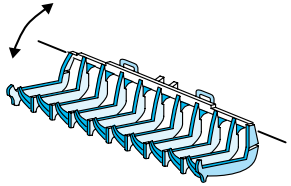

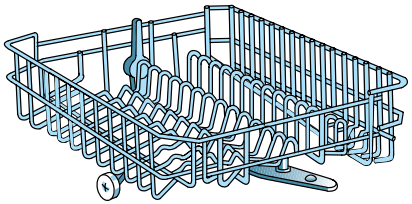

Lower rack

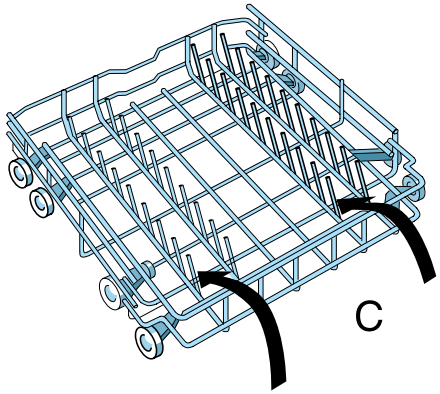

Cutlery basket:

The cutlery basket can be removed to increase available space.